



Stanek AV is committed to providing you a comprehensive electronic system to meet your needs. We use only top quality products in our installations. Each product has been chosen based on a proven track record of performance. Audio, video, security and surveillance systems that we install have the ability to be connected together with our Total Control automation system. This allows for future system integration. This also provides the convenience of controlling all your electronics with easy to use touch screens, remote controls and mobile devices. Let us discuss your needs and start designing a

Security Protection by

**STANEK**

Video Surveillance in use

(803) 727-5498

StanekAV.com

---

AUDIO/VIDEO

---

AUTOMATION

---

HOME THEATER

---

NETWORKING

---

LIGHTING CONTROL

---

AUTOMATED  
SHADES

---

STANEK AV, LLC  
PO Box 3867 IRMO, SC 29063  
(803) 728-6886  
[www.stanekAV.com](http://www.stanekAV.com)

**STANEK**

COMMERCIAL  
ALARM USER GUIDE



Stanek AV is committed to providing innovative & simplified technology solutions for your home or business.

PO Box 3867 IRMO, SC 29063 | (803) 728-6886  
[www.stanekav.com](http://www.stanekav.com)

#### ASK US ABOUT UPGRADES:

Video Surveillance | Carbon Monoxide  
Smoke Detectors | Heat Detectors  
Glass Break Detection | Lighting Integration

#### PANIC BUTTONS:

**Fire** | **Medical** | **Police**. Used to activate alarm and dispatch authorities (if monitored). Press and hold for 2 seconds.

#### DURESS CODE:

Secret code used to turn off the alarm and send a silent alarm to security central for police dispatch. Use this code if forced to turn off the alarm. (Ask if this feature is enabled)

#### SMOKE DETECTOR RESET:

Enter code to silence alarm if no fire present. Find detector with red light ON and take note. From any keypad press \*7 to reset.

#### USER CODES:

Go to [www.alarm.com](http://www.alarm.com). Login to account and select user tab to add and change codes.

#### 24 HOUR SUPPORT:

(803)727-5498 Please call anytime day or night if you are experiencing problems with your security system.

#### EXIT ARMING:

To arm your alarm the ready light must be on. If the light is not on it signifies that there is a zone that is faulted. The keypad display will display "system not ready for help press->" the two up/down buttons on the right side of the screen will allow you to scroll through the faulted zones. Once the zone/s have been identified and closed the ready light will be on and the system can now be armed. Enter your 4 digit code. This will start the 60 sec exit delay. During this delay the keypad will beep once every second and the exit light will be on. Leave the building during this time. During the last 10 seconds of the delay the keypad will begin to beep rapidly and the exit light will flash. Once the exit light is off you may no longer exit the building. Upon re-entry into the building the keypads will emit a steady reminder tone. During this time the LCD keypad will display the message "type code to disarm". If the correct user code is not entered before the expiration of the entry delay the alarm will sound. Entry into the building will only be through doors designated as entry delay doors.

#### STAY ARMING:

This mode is designed to arm the perimeter alarm with out arming the interior motion detection. This mode is used when a person is staying in the building. Enter your 4 digit code. This will start the 60 sec exit delay. During this delay the keypad will beep once every second and the exit light will be on. Do NOT open any entry door. The exit light will flash when the delay reaches 10 seconds. When the beeping stops, the "stay" light illuminates and the panel is now in stay mode. The alarm will automatically bypass the motion detectors in the building. Upon opening of an entry door, the keypads will emit a steady reminder tone. During this time the LCD keypad will display the message "type code to disarm". If the correct user code is not entered before the expiration of the entry delay the alarm will sound. Entry into the building will only be through doors designated as entry delay doors.

#### ZONE BYPASSING:

To bypass a faulted zone simply press "bypass" after using the up/down arrows to show faulted zone. The bypass light will be on if any zones are bypassed. The system should now be ready to arm. To bypass a zone that is not faulted press "\*" then use up/down arrows to display desired zone then press "bypass". Note: Fire zones cannot be bypassed. If a smoke detector continues to false alarm throughout night it can be rotated counter clockwise to remove from base and stop sounding. Call Stanek AV immediately to schedule service.

#### TESTING:

It is recommended that your alarm system is tested weekly for proper operation. Call security central at 800-286-5699. Tell the operator that you want to test your alarm system. They will ask you for your phone number and password. Arm your alarm in the exit mode. Wait until the exit delay has ended. Open the entry door and wait for the entry delay time to end. You will now here sirens. Continue to test other zones. After the alarm has sounded for at least 30 seconds enter your code to silence alarm. Wait a few seconds then call security central back to make sure they received the signals.